



快速入门指南
Quick Start Guide



1.

2.

3.

4.

5.

6.

7.

/

8. USB

9.

10.

11.

12.

-

-M6

★

: GB8898-2011; GB/T13837-2012

/

1. - -

2. - -

/ /

1. ^:

2. v:

3. >||:

QC3.0

USB

USB

TF

1. TF 2TB

2. TF TF

3.5mm

2.5mm 4.4mm

1.

2.

OTA

WiFi

" " " " - -

TF

1. - " -M6 " "TF "

2. " - - "

1. DC5V 2A

2.

3. " " " 12
" " " 12

4.

5.

1

1

USB A Type-C 1

1

Security Instructions

1. Don't repair or modify the device without permission. None of the parts in this device could be checked or repaired by the user. Only professionals are entitled to check or repair this device. If the user dismantles it and modify its internal circuit personally, it will make it difficult for our serviceman to repair, and may possibly impacts its performance and quality.
2. Please don't use this device in extremely hot, cold, dusty or humid circumstances.
3. This device might get warm during charging.
4. Prevent device from falling, friction, or crashing against hard objects during use, otherwise surface scratch, battery disconnection, data loss or other hardware damages will be caused. Please also avoid violent vibration or impact.
5. Please enjoy the music in a proper volume to avoid impairing your hearing and damaging the sound system. Before plugging your headphones into the device, please firstly turn down the volume.
6. Don't clean this device with chemicals or detergents, otherwise its surface and top coating may be damaged.
7. Don't disconnect this device during formatting or transferring files. otherwise, a program error may occur.
8. The USB port is only for data transmission or charging. Please try to avoid using this device when it is charging.
9. When this device is not in use, please charge it regularly to guarantee battery life.
10. Please replace the battery only with ones of the same type as the original ones, as improper replacement will bring the risk of explosion.
11. Never expose battery to sunlight, fire or other extremely hot circumstances.
12. Please download update file from our official site www.shanling.com, and update accordingly to the instruction.



Operational Functions

Power ON / Screen Locking

1. Power on: press and hold power button for 2 seconds, status indicator lights up and device turns on.
2. Power off: press and hold the power button for 2 seconds. The display shows the "Power Off" and "Restart" selection windows. Click on "Power Off" to shut down the device.

3. Screen lock: while the device is powered on, short press power button to lock screen and turn off display. Press power button again to unlock device.

Gesture / Floating Ball Operation

1. Gesture mode (Settings - Display - Virtual Key Mode)

Return to the previous: slide to the right from the left edge of the screen or slide to the left from the right edge of the screen.

Back to the main screen: slide up from the bottom of the screen.

Multitasking: slide up from the bottom of the screen and keep your finger touching screen.

2. Floating ball mode (Setting - Display - Virtual Key Mode)

Return to the previous: click the floating ball on the screen.

Back to the desktop: press and hold the floating ball on the screen.

Multitasking: double click on the floating ball on the screen.

Previous / Next / Play & Pause

1. Previous ⏮: Short press to jump to previous song or to beginning of current song. Long press for fast rewind in currently playing song.
2. Next ⏭: Short press to jump to next song. Long press to fast forward in currently playing song.
3. Play & pause buttons ▶||: short press to play or pause playback.

Volume Control

Turn the wheel clockwise to increase the volume, turn the wheel counterclockwise to decrease the volume.

Charging

Supports QC3.0 fast charge and standard USB charging. When the USB cable is connected, display shows battery charging icon and power level. The status indicator lights up red while charging, it turns off when battery is full.

TF Card Port

1. The port is only for the standard TF card(Micro SD) and supports a capacity up to 2TB.
2. Open the TF card cover, insert the TF card into the card slot in the indicated direction and press it gently until it locks inside. Press again to remove the card.

Headphone Output Interface

The interface is a standard 3.5mm headphone jack.

Balanced Headphone Output Interface

The interface is a standard 2.5mm,4.4mm balanced headphone jack.

Firmware Update

1. When updating the firmware, please make sure that M6 is fully charged.
2. Do not do operate the player during the update process.

Over-the-Air Update

While connected to local Wi-Fi network, device will automatically check for new firmware update. To check for new firmware manually, go to menu "Technical Support - Firmware Update - Online Update" and click on "Check for Update".

TF Card Update

1. Please download firmware update from Shanling's official website. Unzip all the files and copy latest firmware file into root directory of Micro SD card.

2. Go to **TF** TF 7 b n/Wi-Fi4 **Fr**
t e

Common Problems

1. It is recommended to use DC5V 2A adapter. Using the adapter with higher voltage may damage M6.
2. Unable to start M6, it may be caused by low power or exhausted battery, please recharge and then start up again.
3. In the case of system freezing or crashing, please press and hold the Power button for 12 seconds to force a shutdown. To power on after forced shutdown, press and hold the Power button for 12 seconds.
4. If there is noise from headphones, headphone's output interface may not be connected correctly, please try to insert it again.
5. When there is no sound, try to use different pair of headphones or different cable and make sure the system volume is set correctly.

Attached Accessories

Quick start guide: 1	USB A to Type-C cable: 1
Warranty card: 1	Front & rear protective film: 1



Qu

aptX[™] HD

1.

2.

3. ぬだ 度 能まくくぬ。

4.

5.

1 .

|

.....

|

.....

|

.....

3. :

1. / (- -)

:

°

:

:

2.) (- -

:

:

:

/

1. >:

°

2. <:

°

3. / >||:

°

1. DC5V,2A

2.

0

3.

12

12

4. ヘッドホンからノイズが出る ヘッドホンジャックにプラグが正しく挿入されていない可能性があります。再度ヘッドホンを接続し直してください。

5. 音が出ない 別のヘッドホンまたはケーブルを使用して音量が正しく設定されているか、正常に出力されているかを確認してください。また音楽ファイルが正常かを確認してください。

クイックスタートガイド1	USB A to Type-C	1
1	前面 背面保護フィルム	各一枚



/Company:

Produced by Shanling DTD. CO., LTD

/Address :

10

No.10, Chiwan 1 Road, Shekou Nanshan
District of Shenzhen City, China.

QQ /QQ Group: 667914815; 303983891; 554058348

/Telephone: 400-630-6778

/E-mail: info@shanling.com

/Official Website: www.shanling.com

() : 08:00-12:00; 13:30-17:30

Due to continuous improvement, every specification and design is subject to change at any time without further notice.